

EUROCOMPONENTS

Pop-up gas caps for stock tanks

Assembly should be performed by an authorized motorcycle technician



stock gas tank and cap



remove stock gas cap



screw in our pop-up gas cap



press down the spring loaded center part of our gas cap and rotate it 90 degrees until it locks in position



our pop-up gas cap installed



our pop-up gas cap compared with the stock gas cap

Notes:

- what looks like a paint saver ring is actually the base where the spring loaded center part of the cap recesses in. It is one piece with the cap and unscrews with it.
- when pressing down and rotating the spring loaded center part of the cap, make sure you first press all the way down the cap and then start to rotate it. Rotating before the cap is fully compressed will bend or damage the internal locking pin.